

SGH10 / SGH10L

Absolute wire-actuated encoder with CANopen interface

User manual

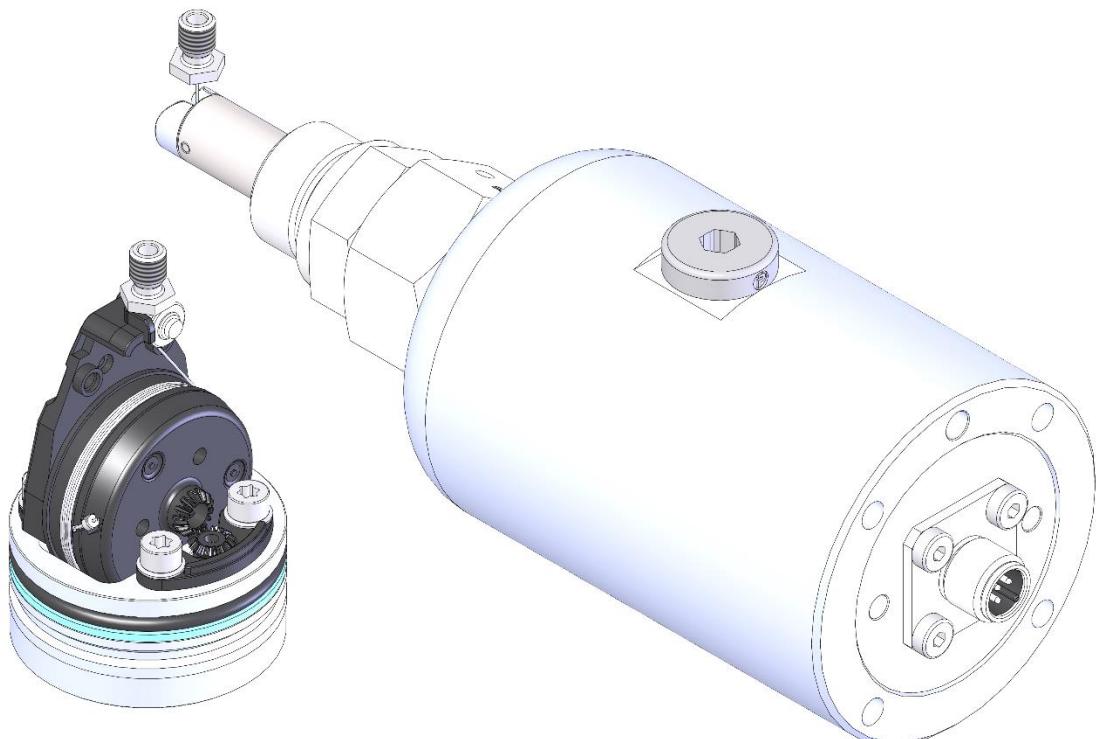


Table of contents

| | |
|---|----------|
| 1 General Information | 5 |
| 1.1 Documentation | 5 |
| 1.1.1 History | 5 |
| 1.2 Definitions | 5 |
| 2 Intended use..... | 5 |
| 2.1 Switching on the supply voltage | 5 |
| 3 Functional description | 6 |
| 3.1 Counting direction..... | 6 |
| 3.2 Calibration | 6 |
| 3.3 Reset to factory settings..... | 6 |
| 4 Communication via CAN bus (CANopen) | 6 |
| 4.1 Frame structure | 7 |
| 4.2 Node control | 8 |
| 4.2.1 Network management (NMT) services | 8 |
| 4.2.1.1 NMT communication states | 9 |
| 4.2.1.2 Toggling between the NMT communication statuses | 10 |
| 4.2.2 Boot-Up..... | 10 |
| 4.2.3 SYNC object..... | 10 |
| 4.3 Process data exchange | 10 |
| 4.3.1 Transmission of process data objects (PDO) | 10 |
| 4.3.1.1 Transmit PDO (from the SGH10 / SGH10L to the master) | 11 |
| 4.4 Parameter data exchange..... | 11 |
| 4.4.1 Transmission of Service Data Objects (SDO)..... | 11 |
| 4.4.1.1 Expedited Request/Response | 12 |
| 4.4.1.2 Normal Request/Response..... | 13 |
| 4.4.1.3 Error Response in SDO exchange | 14 |
| 4.4.1.4 SDO examples | 15 |
| 4.5 Node monitoring | 17 |
| 4.5.1 Emergency Service (EMCY) | 17 |
| 4.5.2 Node Guarding..... | 17 |
| 4.5.3 Heartbeat | 18 |
| 4.6 Layer Setting Service (LSS) | 19 |
| 4.6.1 State change | 20 |
| 4.6.1.1 Switch states of all LSS devices (Switch state global) | 20 |
| 4.6.1.2 Switch states of individual LSS devices (Switch state selective)..... | 20 |
| 4.6.2 Configuration | 21 |
| 4.6.2.1 Setting the node ID (Configure Node-ID) | 21 |
| 4.6.2.2 Configuration of the baud rate (Configure bit timing parameters)..... | 22 |
| 4.6.2.3 Activate baud rate (Activate bit timing parameters) | 23 |
| 4.6.2.4 Store configuration..... | 23 |

| | |
|--|----|
| 4.6.3 Requesting parameters..... | 24 |
| 4.6.3.1 Request Vendor ID | 24 |
| 4.6.3.2 Request Product Code..... | 24 |
| 4.6.3.3 Request revision number..... | 24 |
| 4.6.3.4 Request serial number | 25 |
| 4.6.3.5 Request Node ID..... | 25 |
| 4.7 Directory of objects | 25 |
| 4.7.1 Overview of objects | 25 |
| 4.7.2 Object description..... | 27 |
| 4.7.2.1 1000h: Device Type..... | 27 |
| 4.7.2.2 1001h: Error Register | 28 |
| 4.7.2.3 1002h: Manufacturer Status Register | 28 |
| 4.7.2.4 1003h: Pre-defined Error Field | 29 |
| 4.7.2.5 1005h: COB-ID SYNC-message..... | 29 |
| 4.7.2.6 1008h: Manufacturer Device Name | 30 |
| 4.7.2.7 1009h: Manufacturer Hardware Version | 30 |
| 4.7.2.8 100Ah: Manufacturer Software Version..... | 30 |
| 4.7.2.9 100Ch: Guard Time..... | 31 |
| 4.7.2.10 100Dh: Life Time Factor..... | 31 |
| 4.7.2.11 1010h: Store Parameter..... | 31 |
| 4.7.2.12 1011h: Restore Parameter | 33 |
| 4.7.2.13 1014h: COB-ID Emergency message | 36 |
| 4.7.2.14 1017h: Producer Heartbeat Time | 36 |
| 4.7.2.15 1018h: Identity Object..... | 37 |
| 4.7.2.16 1200h: Server SDO Parameter | 38 |
| 4.7.2.17 1800h: 1 st Transmit PDO Parameter..... | 39 |
| 4.7.2.18 1801h: 2 nd Transmit PDO Parameter | 40 |
| 4.7.2.19 1A00h: 1 st Transmit PDO Mapping Parameter..... | 42 |
| 4.7.2.20 1A01h: 2 nd Transmit PDO Mapping Parameter | 42 |
| 4.7.2.21 5000h: Diagnosis CAN Bus error..... | 43 |
| 4.7.2.22 5F0Ah: Node-ID and baud rate of Bus CAN | 44 |
| 4.7.2.23 6000h: Operating Parameters | 45 |
| 4.7.2.24 6002h: Overall number of measurement steps | 45 |
| 4.7.2.25 6003h: Preset value (calibration value)..... | 45 |
| 4.7.2.26 6004h: Position value | 46 |
| 4.7.2.27 6005h: Resolution | 46 |
| 4.7.2.28 6010h: Calibration value..... | 47 |
| 4.7.2.29 6020h: Position value | 47 |
| 4.7.2.30 6030h: Velocity..... | 48 |
| 4.7.2.31 6200h: Cycle timer..... | 48 |
| 4.7.2.32 6400h: Operating range (Area state register) | 49 |
| 4.7.2.33 6401h: Work Area Low Limit..... | 50 |
| 4.7.2.34 6402h: Work Area High Limit | 50 |
| 4.7.2.35 6500h: Operating Status..... | 51 |

| | | |
|----------|---|----|
| 4.7.2.36 | 6501h: Single-turn resolution..... | 52 |
| 4.7.2.37 | 6502h: Number of distinguishable revolutions | 52 |
| 4.7.2.38 | 6503h: Alarms..... | 52 |
| 4.7.2.39 | 6504h: Supported Alarms..... | 53 |
| 4.7.2.40 | 6505h: Warnings | 53 |
| 4.7.2.41 | 6506h: Supported Warnings | 53 |
| 4.7.2.42 | 6507h: Profile and Software Version | 54 |
| 4.7.2.43 | 6508h: Operating Time | 54 |
| 4.7.2.44 | 6509h: Offset value | 54 |
| 4.7.2.45 | 650Ah: Module Identification..... | 55 |
| 4.7.2.46 | 650Bh: Serial number..... | 56 |
| 4.7.2.47 | 650Ch: Offset value for the multi-sensor device | 56 |

1 General Information

1.1 Documentation

The following documents are associated with this product:

- Data sheet; it describes the technical data, the dimensions, the pin assignment, the accessories and the order key.
- Mounting instructions, they describe the mechanical and electrical installation with all safety-relevant conditions and the associated technical specifications.
- User manual; for commissioning the sensor and integrating it into a fieldbus system.
- EDS file (electronic data sheet); this file enables integration and configuration in a CANopen network by means of standard CANopen configurators.

You can also download these documents at <http://www.siko-global.com/p/sgh10> and <http://www.siko-global.com/p/sgh10l>.

1.1.1 History

| Change | Date | Description |
|--------|------------|---|
| 098/22 | 19.05.2022 | - Chapter: 1.1.1 Histor – new - Tabelle 9: Emergency Error Code In line: Manufacturer specific: speed error - new - Supplements and corrections in the chapter: 3.1, 4.5.1, 4.7.2.18, 4.7.2.33, 4.7.2.34 |

1.2 Definitions

Decimal values are given as numbers without addition (e. g. 1234), except when indicated in direct connection with binary or hexadecimal values in which case the extension d will be used (e. g. 1234d). Binary values are identified by adding b (e. g. 1011b) to the figures whereas hexadecimal values are extended by h (e. g. 280h).

2 Intended use

The SGH10 / SGH10L captures the travel of a hydraulic cylinder as an absolute distance information. By means of the CANopen protocol, the wire-actuated encoder can be configured and read out via the CAN interface.

2.1 Switching on the supply voltage

The SGH10 / SGH10L initializes after being switched on. The configuration parameters are loaded from the non-volatile memory to the RAM of the controller.

The sensor will work with its default values as long as no changes have been made to it. With parameters changed, the sensor will work with the changed data, which must be stored if they are intended to be used after power off/on.

After completing the initialization procedure, a specific NMT command, the boot-up message is sent, which informs the system about availability. The SGH10 / SGH10L is now in the pre-operational mode. In this state, the encoder can be parameterized via SDO commands in accordance with the requirements of the application. This applies to configuration parameters of the sensor unit as well as to the way it makes available to the system its position values (asynchronous or synchronous data transmission).

3 Functional description

3.1 Counting direction

The encoder supplies increasing position values when the cable is pulled out. This property can be changed via Object [6000h: Operating Parameters](#).

3.2 Calibration

Owing to the absolute system, calibration is required only once when the system is taken into operation and can be performed at any position. This enables alignment of the encoder zero point with the system's mechanical zero point. With calibration, the calibration value is adopted for calculation of the position value. The resulting offset value is output in Object [6509h: Offset value](#). The following equation is applied in case of calibration:

$$\text{Position value} = 0 + \text{calibration value}$$

3.3 Reset to factory settings

To return to the original condition of the device as delivered, there exist the following options:

| Access | Coding | | Settings are restored |
|---|-----------------|------------|---------------------------------------|
| CANopen (see Object 1011h: Restore Parameter) | 1011h "load" | Subindex 1 | All parameters |
| | | Subindex 2 | Only bus parameters |
| | | Subindex 3 | Only CiA DS-406 parameters |
| | | Subindex 4 | Only manufacturer-specific parameters |

Table 1: Access to factory settings

4 Communication via CAN bus (CANopen)

The CiA DS-301 V4.2 CANopen communication profile, the Device profile for Encoders CiA DS-406 V3.2, forms the basis of the SGH10 / SGH10L. The SGH10 / SGH10L supports device class C2. The details required for a better understanding of operation are included in this documentation. If more in-depth information is required, we recommend the applicable technical literature on CAN or CANopen.

4.1 Frame structure

The data frame of a CAN message consists of the following fields:

| | | | | | |
|-----|---------------------|---------------|--------------------------|-----|---------|
| SOF | Identifier (COB-ID) | Control field | Data field (max. 8 byte) | CRC | ACK/EOF |
|-----|---------------------|---------------|--------------------------|-----|---------|

SOF:

(Start of Frame) start bit of the frame

Identifier (COB-ID):

- By means of the identifier, all bus subscribers check whether the message is relevant for them.
- The identifier determines the priority of the message. The lower the value of the identifier, the higher is the priority of the message. This enables preferential transmission of important messages via the bus.

The Identifier field contains the identifier as well as bits for the recognition of the length of the identifiers (11 or 29 bits). The device address, channel selection as well as data direction are determined via the identifier as well.

Thus, the 11bit identifier (COB identifier) consists of a 4bit functional code and a 7bit node number.

| | | | | | | | | | | | |
|------------|-----------------|---|---|---|-----------------------|---|---|---|---|---|---|
| Bit no. | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Type | Functional code | | | | Node number (Node ID) | | | | | | |
| Assignment | x | x | x | x | 0 | 0 | x | x | x | x | X |

The following functional codes have been defined in the "Pre-defined Connection Set" (only the functional codes used in the present device are shown):

| Object | Functional code | Resulting COB-ID | Object | Page |
|--------------------------|-----------------|------------------------|--------|--------------------|
| Network management (NMT) | 0000b | 0 | - | 8 |
| SYNC message | 0001b | 128d (80h) | 1005h | 29 |
| Emergency message | 0001b | 128d (80h) + Node-ID | 1014h | 36 |
| TPD01 | 0011b | 384d (180h) + Node-ID | 1800h | 39 |
| TPD02 | 0101b | 640d (280h) + Node-ID | 1801h | 40 |
| SDO (tx) | 1011b | 1408d (580h) + Node-ID | 1200h | 38 |
| SDO (rx) | 1100b | 1536d (600h) + Node-ID | 1200h | 38 |
| Heartbeat message | 1110b | 1792d (700h) + Node-ID | - | 18 |
| Node Guard message | 1110b | 1792d (700h) + Node-ID | - | 17 |
| LSS (tx) | - | 2021d (7E4h) | - | 19 |
| LSS (rx) | - | 2020d (7E5h) | - | 19 |

Table 2: Overview of COB identifiers

Changes to COB IDs are only possible in the PRE-OPERATIONAL NMT status. First, the COB ID must be switched invalid via bit 31 = 1b before it can be changed and reactivated.

The COB ID of the Sync object is an exception, where bit 30 must be = 0b to enable the COB ID to be changed. Since bit 30 cannot be set to 1b, the COB ID could be changed at any time.

The node number (Node ID) (see also object [5F0Ah: Node-ID and baud rate of Bus CAN](#)) is assigned once in every bus system with configuration of the master on SGH10 / SGH10L. The node numbers range from 1 to 127. Node ID = 0 is reserved and must not be used.

The adoption of a node ID or baud rate which was reset occurs only after re-initialization (see chapter [4.2.1: Network management \(NMT\) services](#)).

Ex works, the SGH10 / SGH10L wire-actuated encoder is delivered with node number 1 (1h).

Control field:

contains bit-by-bit information concerning the number of user data and determines whether a data frame or Remote Transmission Request (RTR) frame is concerned.

Data field:

contains up to 8 bytes of user data. The user data has a different meaning depending on the channel selection.

CRC:

contains bits for error detection.

ACK/EOF:

The ACK/EOF field contains frame acknowledgment bits as well as bits for determining the end of frame.

For a detailed description of the frame please refer to the applicable technical CAN literature. For simplification, only identifier (COB ID) and data field will be dealt with in the subsequent frame descriptions.

4.2 Node control

4.2.1 Network management (NMT) services

The master configures, manages and monitors network nodes via the NMT service. The device is always in one of the four communication states "INITIALISATION", "PRE-OPERATIONAL", "OPERATIONAL" or "STOPPED" (see [Fig. 1](#)).

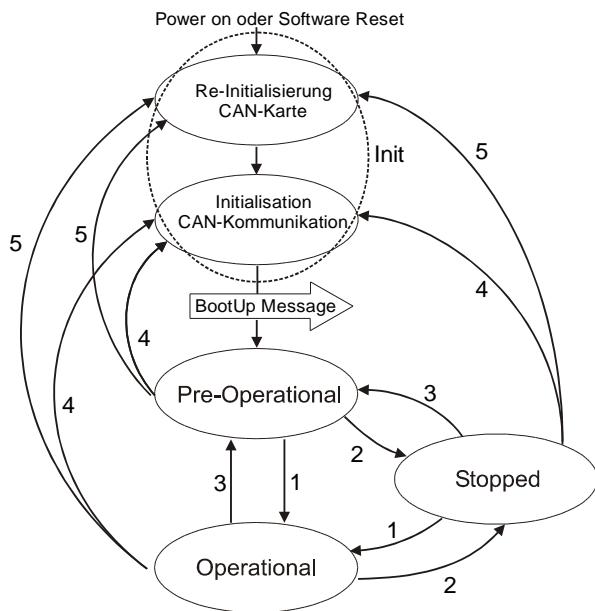


Fig. 1: NMT Status diagram

4.2.1.1 NMT communication states

NMT Status 'INITIALISATION'

The device is not involved in the bus actions in this state. All hardware and software components are initialized. This state is attained after switching on the device or after receipt of the command code 81h ("Reset node") of the own or global addresses. Following receipt of the command code 82h ("Reset Communication"), the display will enter the initialization stage as well. But only hardware and software associated with CAN communication will be reinitialized. The device signals automatically the completion of initialization by sending a boot-up message. As soon as the boot-up message was sent successfully, the device will enter the "PRE-OPERATIONAL" status.

NMT Status PRE-OPERATIONAL

Parameterization data (SDO) can be exchanged in the pre-operational mode. However, no process data (PDO's) is transmitted.

NMT Status OPERATIONAL

The exchange of process data is enabled as well. However, COB-ID and Transmit PDO Mapping parameters can no longer be changed in this state.

NMT Status STOPPED

Communication is stopped except for heartbeat and node guarding. Only NMT communication is enabled.

4.2.1.2 Toggling between the NMT communication statuses

For toggling between the communication statuses, frames with the following structures are used:

| Change of state | | Transition in Fig. 1 | COB- ID | Com- mand | Node ID |
|---|--------------------------------------|-------------------------|------------|--------------|------------|
| from | to | | | | |
| PRE-OPERATIONAL / STOPPED | OPERATIONAL | 1d | 0h | 01h | x |
| OPERATIONAL/ PRE-OPERATIONAL | STOPPED | 2d | 0h | 02h | x |
| OPERATIONAL / STOPPED | PRE-OPERATIONAL | 3d | 0h | 80h | x |
| OPERATIONAL / PRE-OPERATIONAL / STOPPED | INITIALISATION (Reset Node) | 5d | 0h | 81h | x |
| OPERATIONAL / PRE-OPERATIONAL / STOPPED | INITIALISATION (Reset Communication) | 4d | 0h | 82h | x |

Table 3: Toggling between communication states

If x = 0h is transmitted as node ID, then the message is intended for all bus subscribers.

4.2.2 Boot-Up

The COB ID of the boot-up message is made up of 700h and the node ID. The "Initialization" NMT status is output as data content.

| COB-ID | Byte 0 |
|----------------|--------|
| 700h + Node-ID | 00h |

Table 4: Boot-Up message

4.2.3 SYNC object

CANopen enables the simultaneous query of all inputs and the simultaneous setting of all outputs. The synchronization message (SYNC), a CAN message with high priority serves this purpose. The identifier of the Sync object can be set via object 1005h (see [1005h: COB-ID SYNC-message](#)).

4.3 Process data exchange

4.3.1 Transmission of process data objects (PDO)

Process data objects (PDO) serve for fast exchange of process data. A maximum of 8 bytes of user data can be transmitted in a PDO. The SGH10 / SGH10L supports the Transmit PDO services TPD01 and TPD02 according to CiA DS-301 and CiA DS-406.

4.3.1.1 Transmit PDO (from the SGH10 / SGH10L to the master)

PDO transmission from the display to the bus master (TPDO) can be initiated as a result of various events:

- asynchronous, controlled by an internal device timer
- synchronous as a response to a SYNC message
- as a response to an RTR message

TPD01 and TPD02 are generated from the position value and the speed value. The transmission behavior of TPD01 is determined via the objects 1800h, 1A00h and 6200h and is assigned to asynchronous transmission. TPD02 is defined via the objects 1801h and 1A01h and serves synchronous transmission. Assignment is static and cannot be changed.

The messages are structured as shown below.

| COB-ID | Process data in binary code | | | | | |
|-------------------------|-----------------------------|--------|--------|-----------------|-----------------|-----------------|
| | Byte 0 (LSB) | Byte 1 | Byte 2 | Byte 3 (MSB) | Byte 4 (LSB) | Byte 5 (MSB) |
| TPD01 180h + Node-ID | Position value | | | Velocity value | | |
| TPD02 280h + Node-ID | | | | | | |

Table 5: TPDO message

Asynchronous data transmission (TPD01)

If a TPD01 is to be sent cyclically, then the cycle time must be entered in milliseconds into object 1800h, subindex 05h. The TPD01 will not be sent if the value 0 ms is written. The function is disabled. The minimum value to be set is 1 (= 1 ms). Alternately, the value can also be written into the permanently internally linked object 6200h.

Synchronous data transmission (TPD02)

As delivered, the device responds to every SYNC Message received with the output of the TPD02 message. 1h is entered for synchronous transmission in object 1801h, subindex 02h. If a value n is entered between 1d and 240d (= F0h), the device will respond to every nth SYNC message.

RTR

Queries can be sent via RTR (see chapter [4.1: Frame structure](#), control field) to TPD01 and TPD02.

4.4 Parameter data exchange

4.4.1 Transmission of Service Data Objects (SDO)

Service data objects serve mainly device configuration via the directory of objects. SDOs in the expedited Request/Response and in the normal Request/Response are supported.

The identifier is set to 11 bits and cannot be changed.

Two SDO services are available:

- SDO (rx) (Master → SGH10 / SGH10L): 600h + Node-ID
- SDO (tx) (SGH10 / SGH10L → Master): 580h + Node-ID

These SDO identifiers cannot be changed!

4.4.1.1 Expedited Request/Response

Except for reading the object [1008h: Manufacturer Device Name](#), all SDOs are exchanged between two subscribers in the expedited Request/Response method. The user data is provided already with the initialization message.

These SDO messages are set up as follows:

| COB-ID | User data in binary code | | | | | | | |
|---------------------|--|------------|--------------|-----------------------|------------|--------|--------|--------------|
| | Byte 0 _[SEP] (read / write) | Byte 1 LSB | Byte 2 (MSB) | Byte 3 | Byte 4 LSB | Byte 5 | Byte 6 | Byte 7 (MSB) |
| SDO rx/tx + Node-ID | Command byte | Index | Subindex | User data (parameter) | | | | |

Command byte, byte 0:

The command byte determines the type of access and the number of valid data bytes. The following command bytes are valid for the SGH10 / SGH10L:

| Command byte | | Type | Function |
|----------------|-----|--|---|
| Write Request | 23h | SDO (rx), Initiate Download Request, expedited | Send parameter to slave (All 4 data bytes valid) |
| Write Request | 2Bh | SDO (rx), Initiate Download Request, expedited | Send parameter to slave (2Bytes of 4 data bytes valid) |
| Write Request | 2Fh | SDO (rx), Initiate Download Request, expedited | Send parameter to slave (1Byte of 4 data bytes valid) |
| Write Response | 60h | SDO (tx), Initiate Download Response | Acknowledgment of data acquisition to master |
| Read Request | 40h | SDO (rx), Initiate Upload Request | Request parameter from slave |
| Read Response | 43h | SDO (tx), Initiate Upload Response, expedited | Report parameter to master (All 4 data bytes valid) |
| Read Response | 4Bh | SDO (tx), Initiate Upload Response, expedited | Report parameter to master (2Bytes of 4 data bytes valid) |
| Read Response | 4Fh | SDO (tx), Initiate Upload Response, expedited | Report parameter to master (1Byte of 4 data bytes valid) |
| Error Response | 80h | SDO (tx), Abort Domain Transmission | Slave reports error code to master |

Table 6: Command coding

Index, bytes 1 and 2:



The index (object number) is entered in the user data byte 2 (low byte) and user data byte 3 (high byte) in the Intel data format. Here, the index of the object to be parameterized is entered.

Subindex, Byte 3:

The subindex indicates the number of the fields for objects realized as an array.

User data (parameters), byte 4-7:

In the user data, the value of the parameter is entered in left-aligned Intel notation. Byte 4 = Low-Byte ... Byte 7 = High-Byte.

4.4.1.2 Normal Request/Response

If more than 4 bytes of service data are to be transmitted, the data is exchanged between two subscribers via the normal Request/Response. This procedure is also initiated by an initialization message, and the actual user data will be transmitted in the subsequent segment messages.

For the SGH10 / SGH10L this is only the case with reading of the object [1008h: Manufacturer Device Name](#).

The initialization message has the following structure:

| COB-ID | User data in binary code | | | | | | | |
|---------------------|---|------------|--------------|----------|---------------------------------|--------|--------|--------------|
| | Byte 0 _[1] _[SEP] (read / write) | Byte 1 LSB | Byte 2 (MSB) | Byte 3 | Byte 4 LSB | Byte 5 | Byte 6 | Byte 7 (MSB) |
| SDO rx/tx + Node-ID | Command byte | Index | | Subindex | User data (number of user data) | | | |

The segment message has the following structure:

| COB-ID | User data in binary code | | | | | | | |
|---------------------|---|------------|--------|--------|--------|--------|--------|--------------|
| | Byte 0 _[1] _[SEP] (read / write) | Byte 1 LSB | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 (MSB) |
| SDO rx/tx + Node-ID | Command byte | User data | | | | | | |

Initialization and segment message: Command byte, byte 0:

The command byte determines the type of access and the number of valid data bytes. The following command bytes are valid for the encoder:

| Command byte | | Type | Function |
|--------------|-----|--|---|
| Read Request | 40h | SDO (rx), Normal Initiate Upload Request | Request parameter from slave (number of bytes to be transmitted). |
| Read Request | 60h | SDO (rx), Normal Segment Upload Request | Request parameter from slave (user data) |

| Command byte | | Type | Function |
|---------------------|-----|---|---|
| Read Response | 41h | SDO (tx), Normal Initiate Upload Response | Report parameter to master (number of bytes to be transmitted). |
| Read Response | 03h | SDO (tx), Normal Segment Upload Response | Report parameter to master (user data) |
| Error Response | 80h | SDO (tx), Abort Domain Transmission | Slave reports error code to master |

Table 7: Command coding

Initialization message: Index, bytes 1 and 2:

The index (object number) is entered in the user data byte 2 (low byte) and in the user data byte 3 (high byte) in the Intel data format. Here, the index of the object to be parameterized is entered.

Initialization message: Subindex, byte 3:

The subindex indicates the number of the fields for objects which are realized as an array.

Initialization message: User data (parameters), byte 4-7:

In the service data range, the value of the parameter is entered in left-aligned Intel notation. Byte 4 = Low-Byte ... Byte 7 = High-Byte.

Segment message: User data (parameters), byte 1-7:

In the user data range, the value of the parameter is entered in left-aligned Intel notation. Byte 1 = Low-Byte ... Byte 7 = High-Byte.

4.4.1.3 Error Response in SDO exchange

With invalid access, an error message (Abort) is returned to the master.

The error codes are described in the CANopen profile (CiA DS-301) or in the encoder profile (CiA DS- 406), respectively. The table below shows the error codes used:

| Error code | Description |
|-------------------|---|
| 05030000h | Toggle bit in Normal Transmission of Request/Response unequal. |
| 06010000h | Wrong access to an object. |
| 06010001h | Read access to Write-Only |
| 06010002h | Write access to Read-Only. |
| 06020000h | Object doesn't exist in the object directory. |
| 06090011h | Subindex does not exist |
| 06090030h | Wrong value range of selected parameter. |
| 08000020h | Parameters cannot be transmitted to application or stored. |
| 08000022h | Parameters cannot be transmitted to application or stored due to the current device status. |
| 08000024h | No data available |

Table 8: Error codes

4.4.1.4 SDO examples

Example of reading SDO parameters with the expedited Request/Response:

The calibration value stored in object 6010h subindex 01h of the directory of objects is to be read from the slave with device address 1h.

Calculation of the identifier: 600h + Node-ID = 600h +1h = 601h

Command: 40h

Index: 6010h

Subindex: 01h

The current value is 510d = 01FEh

Request of master from slave with node ID 1h:

| COB-ID | User data | | | | | | | |
|--------|-----------|---------|---------|----------|--------|--------|--------|--------|
| | Command | Index L | Index H | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 601h | 40h | 10h | 60h | 01h | x | x | x | x |

Response to the request by the slave

Calculation of the identifier: 580h + Node-ID = 581h

| COB-ID | User data | | | | | | | |
|--------|------------------------|----------|----------|----------|--------|--------|--------|--------|
| | Command | Index LB | Index HB | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 581h | 43h (4 bytes valid) | 10h | 60h | 01h | FEh | 01h | 00h | 00h |

Example of writing SDO parameters with the expedited Request/Response:

The calibration value stored with 2 bytes in object 6002 of the directory of objects is to be changed in the slave with device address 1h.

Calculation of the identifier: 600h + Node-ID = 600h + 1h = 601h

Command: 2 bytes are to be written 2Bh

Index: 6200h

Subindex: 00h

The new value shall be 4500d = 1194h

Writing of a value from master to slave with node ID 1h:

| COB-ID | User data | | | | | | | |
|--------|------------------------|---------|---------|----------|--------|--------|--------|--------|
| | Command | Index L | Index H | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 601h | 2Bh (2 bytes valid) | 00h | 62h | 00h | 94h | 11h | 00h | 00h |

Response to the command by the slave:

Calculation of the identifier: $580\text{h} + \text{Node-ID} = 580\text{h} + 1\text{h} = 581\text{h}$

| COB-ID | User data | | | | | | | |
|--------|-----------|---------|---------|----------|--------|--------|--------|--------|
| | Command | Index L | Index H | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 581h | 60h | 00h | 62h | 00h | 00h | 00h | 00h | 00h |

Example of reading SDO parameters with normal Request/Response:

The manufacturer device name stored in object 1008h of the directory of objects is to be read from the SGH10 / SGH10L with device address 1h.

Calculation of the identifier: $600\text{h} + \text{Node-ID} = 600\text{h} + 1\text{h} = 601\text{h}$

Command: 40h

Index: 1008h

Subindex: 00h

First request (= initialization) of master from slave with node ID 1h:

| COB-ID | User data | | | | | | | |
|--------|-----------|---------|---------|----------|--------|--------|--------|--------|
| | Command | Index L | Index H | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 601h | 40h | 08h | 10h | 00h | x | x | x | x |

Response to the request by the slave

Calculation of the identifier: $580\text{h} + \text{Node-ID} = 581\text{h}$

| COB-ID | User data | | | | | | | |
|--------|-----------|----------|----------|----------|--------|--------|--------|--------|
| | Command | Index LB | Index HB | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 581h | 41h | 08h | 10h | 00h | 05h | 00h | 00h | 00h |

Number of expected user data bytes: 5

Second request of master from slave with node ID 1h:

| COB-ID | User data | | | | | | | |
|--------|-----------|---------|---------|----------|--------|--------|--------|--------|
| | Command | Index L | Index H | Subindex | Data 0 | Data 1 | Data 2 | Data 3 |
| 601h | 60h | 08h | 10h | 00h | x | x | x | x |

Response to the request by the slave

| COB-ID | User data | | | | | | | |
|--------|-----------|--------------|--------------|--------------|--------------|--------------|----------|----------|
| | Command | Data 0 | Data 1 | Data 2 | Data 3 | Data 4 | Data 5 | Data 6 |
| 581h | 03h | 53h ("S") | 47h ("G") | 48h ("H") | 31h ("1") | 30h ("0") | 00h - | 00h - |



4.5 Node monitoring

4.5.1 Emergency Service (EMCY)

In the case of an error, the status of the bus subscriber is transmitted via high-priority emergency messages (emergency frames). These messages have a data length of 8 bytes and contain error information.

The emergency message is transmitted as soon as a sensor or communication error has occurred or when such errors have been corrected. The cause of the error is deposited in the error buffer (see object [1003h: Pre-defined Error Field](#)). An emergency object is sent only once per error event. Removal of the cause of the error is signaled by sending an emergency message with the error code 0000h (no error). If multiple errors have occurred and one cause of error is removed, the error code 0000h is output as well; the persisting error status is indicated in the error register, however.

| Identifier | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
|------------|----------------------|-------------------------------|--|--------|--------|--------|--------|--------|
| 11/ 29 Bit | Emergency Error Code | Error Register (Object 1001h) | Manufacturer-specific error field (not used) | | | | | |

Emergency Error Code:

| Error description | Error Code |
|---|------------|
| Cause of the error removed | 0000h |
| Bus status changed over to the error passive mode | 8120h |
| Recovered from Bus Off | 8140h |
| Manufacturer-specific: Position value error | FF05h |
| Manufacturer-specific: Speed error | FF12h |
| Manufacturer-specific: Position error work area 1 | FF15h |
| Manufacturer-specific: Position error work area 2 | FF16h |

Table 9: Emergency Error Code

The identifier of the emergency object is set to 80h + node ID by default but can be changed via object 1014h (see [1014h: COB-ID Emergency message](#)). Transmission of an emergency message is enabled in the NMT statuses "OPERATIONAL" or "PRE-OPERATIONAL" only. Transmission of the emergency messages can be disabled by setting the COB-ID Valid bit to 1.

4.5.2 Node Guarding

Node guarding is available for failure monitoring of the CANopen network. During node guarding, the master transmits remote frames (RTR, remote transmit request, message request frames) on the guarding identifiers of the bus nodes to be monitored. The latter respond with the guarding message. This message contains the current NMT status of the node as well as a toggle bit whose value must change after each message. The master assumes that a node error has occurred if status or toggle bits do not correspond with the values expected by the master or if there is no response.

Via objects 100Ch (Guard Time) and 100Dh (Life Time Factor) the time interval (Life-Time) is set within which the NMT master expects to receive a response. The time interval "Life Time" is calculated from the cycle time "Guard Time", multiplied with the factor "Life Time Factor". If the NMT master does not receive a response to its RTR frame within the "Life Time", it may react with suitable measures. Upon switching on, node guarding will be enabled by sending the first RTR frame of the master to the slave. Node Guarding is deactivated if the value of either object (100Ch or 100Dh) is set to 0h.

The response of the node to the RTR frame of the master is formed as follows:

| Identifier | Byte 0 | |
|----------------|-------------------|-----------------------|
| 700h + Node-ID | Bit 7: Toggle Bit | Bit 6 ... 0 NMT state |

Toggle Bit:

The toggle bit must alternate between two subsequent responses of the device. After the guarding protocol has been enabled, the toggle bit must have the value 0 with the first response.

NMT state:

4: STOPPED

5: OPERATIONAL

127: PRE-OPERATIONAL

The identifier of the node guarding protocol is permanently set to 700h + Node ID and cannot be changed. A node guard message can be sent in the NMT statuses "OPERATIONAL", "PRE-OPERATIONAL" or "STOPPED".

Note:

Literature recommends heartbeat to be used for node monitoring. Only the master can detect missing communication via the node guarding protocol as opposed to the heartbeat that can be received by all subscribers.

4.5.3 Heartbeat

The master monitors the state of the slave device via Heartbeat protocol. While doing this, the device sends independently its NMT status cyclically. The SGH10 / SGH10L is a heartbeat producer, it does not receive nor process heartbeat protocols itself. The cycle time of the heartbeat message is set via object 1017h. The heartbeat protocol is deactivated if the cycle time is 0h.

The heartbeat message consists of the COB ID and an additional byte. In this byte, the current NMT state is deposited.

| COB-ID | Byte 0 |
|----------------|-----------|
| 700h + Node-ID | NMT state |

NMT state:

4: STOPPED

5: OPERATIONAL

127: PRE-OPERATIONAL

The identifier of the heartbeat protocol is permanently set to 700h + Node ID and cannot be changed. Heartbeat messages are sent in the NMT statuses "OPERATIONAL", "PRE-OPERATIONAL" or "STOPPED".

4.6

Layer Setting Service (LSS)

Layer Setting Service (LSS) is a special method described in CiA DS-305it serves for retrieving and configuring various parameters (node ID, baud rate, and Identity Object 1018h).

Every device must have a unique LSS number composed of the entries in Object 1018h.

- Vendor ID: 0000 0195h
- Product Code: FFFF FFFFh
- Revision number: FFFF FFFFh
- Serial number: xxxx xxxxh (relevant serial number of the encoder)

In order to enable the use of full LSS functionality, all devices on the bus must support the LSS method. An LSS master must exist and all nodes must start with the same baud rate. After starting, the device will be in the LSS waiting state. To enable configuration, one or all devices must be switched to the LSS configuration state. If the LSS master expects to receive an answer to its command, only one LSS slave must be switched to the LSS configuration mode.

Two LSS services are available:

- LSS (rx) (LSS master → SGH10 / SGH10L): 7E5h
- LSS (tx) (SGH10 / SGH10L → LSS master): 7E4h

These LSS identifiers cannot be changed!

A message consists always of 8 bytes. Byte 0 contains the command (Command – Specifier cs), followed by max. 7 data bytes. Unused data bytes are reserved and must be filled with 00h.

| Services | LSS waiting | LSS configuration |
|---------------------------------|-------------|--|
| Switch state global | yes | yes |
| Switch state selective | yes | no |
| Activate bit timing parameters | no | Yes, if all devices on the bus support LSS |
| Configure bit timing parameters | no | yes |
| Configure node-ID | no | yes |
| Store configuration | no | yes |
| Request LSS address | no | yes |
| Request Node ID | no | yes |

Table 10: State behavior of the supported LSS services

4.6.1 State change

4.6.1.1 Switch states of all LSS devices (Switch state global)

With this command, all devices on the bus can be set to the LSS Waiting or LSS Configuration states. The LSS slave devices do not respond.

Master → all LSS slaves

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 04h | Mode | 00h | 00h | 00h | 00h | 00h | 00h |

Mode:

00h: Switch to LSS waiting state

01h: Switch to LSS configuration state

4.6.1.2 Switch states of individual LSS devices (Switch state selective)

With this command, individual LSS slave devices can be set to the LSS Configuration state via the unique LSS number.

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|-----------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 40h | Vendor ID | | | | 00h | 00h | 00h |

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 41h | Product code | | | | 00h | 00h | 00h |

| COB-ID | User data | | | | | | | |
|--------|-------------------|-----------------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 42h | Revision number | | | | 00h | 00h | 00h |

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| | | | | | | | | |

| | | | | | |
|------|-----|---------------|-----|-----|-----|
| 7E5h | 43h | Serial number | 00h | 00h | 00h |
|------|-----|---------------|-----|-----|-----|

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 44h | 00h |

4.6.2 Configuration

4.6.2.1 Setting the node ID (Configure Node-ID)

The LSS master can configure the node ID of single LSS slaves switched to the configuration mode. If the new node ID is intended to still be available after Power off/on, the "Store configuration" command must be executed after the change. For immediate activation of the new node ID, the LSS slave must be set to the LSS Waiting mode, followed by an NMT "Reset Communication" 82h. Another possibility would be to execute power off/on after "Store configuration".

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 11h | NID | 00h | 00h | 00h | 00h | 00h | 00h |

NID:

01h ... 7Fh: Node ID

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|------------|------------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 11h | Error Code | Spec error | 00h | 00h | 00h | 00h | 00h |

Error Code:

00h: Transmission successful

01h: no valid node ID

FFh: Implementation error see Spec error

Spec error:

This byte is nonzero only in case of an implementation error and Error Code FFh.

4.6.2.2 Configuration of the baud rate (Configure bit timing parameters)

The baud rate of a single or of multiple LSS slaves can be configured via this command. If the new baud rate is intended to still be available after Power off/on, the "Store configuration" command must be executed after the change. To activate the new baud rate the [4.6.2.3 Activate baud rate \(Activate bit timing parameters\)](#) command must be executed and the LSS slave set to the LSS Waiting state. Another possibility of activating the new baud rate would be to execute power off/on after "Store configuration".

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|----------------|-------------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 13h | Table selector | Table index | 00h | 00h | 00h | 00h | 00h |

Table selector:

00h: CiA DS-301 bit timing table

80h...FEh: Manufacturer-specific bit timing table

Table index:

| Table index | Baud rate |
|-------------|---------------|
| 0 | 1000 kbit/s |
| 1 | 800 kbit/s |
| 2 | 500 kbit/s |
| 3 | 250 kbit/s |
| 4 | 125 kbit/s |
| 5 | reserved |
| 6 | 50 kbit/s |
| 7 | 20 kbit/s |
| 8 | not supported |
| 9 | not supported |

The device supports only Table selector 00h and Table index 0 until 7.

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|------------|------------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 13h | Error Code | Spec error | 00h | 00h | 00h | 00h | 00h |

Error Code:

00h: Transmission successful

01h: no valid baud rate

FFh: Implementation error see Spec error

Spec error:

This byte is nonzero only in case of an implementation error and Error Code FFh.

4.6.2.3 Activate baud rate (Activate bit timing parameters)

This command activates the new baud rate set via [4.6.2.2 Configuration of the baud rate \(Configure bit timing parameters\)](#) without requiring Power off/on.

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|---------------|---------------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 LSB | Byte 2 MSB | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 15h | Switch delay | | 00h | 00h | 00h | 00h | 00h |

Switch Delay:

The Switch delay parameter defines the length of two delay periods (d1, d2) of the same length and must correspond with a multiple of 1 ms. After expiry of the individual processing time and delay time d1, the new baud rate will be adopted internally. After expiry of the delay time d2, the LSS slave will report with the boot up via the newly set baud rate. This procedure prevents the synchronous presence on the bus of devices with different baud rates. The LSS slave cannot send messages during the two delay periods d1 and d2.

4.6.2.4 Store configuration

This command must only be executed if only one LSS slave is in the configuration mode. The current settings will be stored subsequently.

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 17h | 00h |

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|------------|------------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 17h | Error Code | Spec error | 00h | 00h | 00h | 00h | 00h |

Error Code:

00h: Transmission successful

01h: Store configuration is not supported

02h: Error occurred during storing

FFh: Implementation error see Spec error

Spec error:

This byte is nonzero only in case of an implementation error and Error Code FFh

4.6.3 Requesting parameters

The following requests must only be executed if only one LSS slave is in the configuration mode.

4.6.3.1 Request Vendor ID

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 5Ah | 00h |

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------------------------------|--------|--------|---------------|--------|--------|--------|
| | Byte 0 Command | Byte 1 LSB | Byte 2 | Byte 3 | Byte 4 MSB | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 5Ah | Vendor ID (see Object 1018.1h) | | | | 00h | 00h | 00h |

4.6.3.2 Request Product Code

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 5Bh | 00h |

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|-----------------------------------|--------|--------|---------------|--------|--------|--------|
| | Byte 0 Command | Byte 1 LSB | Byte 2 | Byte 3 | Byte 4 MSB | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 5Bh | Product Code (see Object 1018.2h) | | | | 00h | 00h | 00h |

4.6.3.3 Request revision number

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| | | | | | | | | |

| | | | | | | | | |
|------|-----|-----|-----|-----|-----|-----|-----|-----|
| 7E5h | 5Ch | 00h |
|------|-----|-----|-----|-----|-----|-----|-----|-----|

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|----------------------------------|--------|--------|---------------|--------|--------|--------|
| | Byte 0 Command | Byte 1 LSB | Byte 2 | Byte 3 | Byte 4 MSB | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 5Ch | Revision number (Object 1018.3h) | | | 00h | 00h | 00h | 00h |

4.6.3.4 Request serial number

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 5Dh | 00h |

SGH10 / SGH10L → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------------------------------|--------|--------|---------------|--------|--------|--------|
| | Byte 0 Command | Byte 1 LSB | Byte 2 | Byte 3 | Byte 4 MSB | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 5Dh | Serial number (Object 1018.4h) | | | 00h | 00h | 00h | 00h |

4.6.3.5 Request Node ID

Master → SGH10 / SGH10L

| COB-ID | User data | | | | | | | |
|--------|-------------------|--------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E5h | 5Eh | 00h |

SGH10 / SGH10L 0 → master

| COB-ID | User data | | | | | | | |
|--------|-------------------|---------------|--------|--------|--------|--------|--------|--------|
| | Byte 0 Command | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 | Byte 7 |
| 7E4h | 5Eh | Node-ID (NID) | 00h | 00h | 00h | 00h | 00h | 00h |

4.7 Directory of objects

4.7.1 Overview of objects

The following table offers an overview of the objects of the device.



| Name | Description | see page |
|---|---|--------------------|
| 1000h: Device Type | Device profile and encoder type | 27 |
| 1001h: Error Register | Current error status of the device | 28 |
| 1002h: Manufacturer Status Register | Contains the Transmit Error Counter and the Receive Error Counter | 28 |
| 1003h: Pre-defined Error Field | The object stores the 8 error states that have occurred last | 29 |
| 1005h: COB-ID SYNC-message | Setting of the COB ID of the SYNC object. | 29 |
| 1008h: Manufacturer Device Name | Device name in ASCII notation | 30 |
| 1009h: Manufacturer Hardware Version | Indicates the hardware version of the device | 30 |
| 100Ah: Manufacturer Software Version | Indicates the software version of the device | 30 |
| 100Ch: Guard Time | Parameter for Node Guarding | 31 |
| 100Dh: Life Time Factor | Parameter for Node Guarding | 31 |
| 1010h: Store Parameter | Object for non-volatile storage of the settings | 31 |
| 1011h: Restore Parameter | Object for restoring the factory settings | 33 |
| 1014h: COB-ID Emergency message | COB ID of the Emergency object | 36 |
| 1017h: Producer Heartbeat Time | Setting of the cycle time of the heartbeat timer | 36 |
| 1018h: Identity Object | Contains the manufacturer number | 37 |
| 1200h: Server SDO Parameter | SDO parameter | 38 |
| 1800h: 1 st Transmit PDO Parameter | Transmit PDO for asynchronous transmission (timer-controlled) | 39 |
| 1801h: 2 nd Transmit PDO Parameter | Transmit PDO for synchronous transmission | 40 |
| 1A00h: 1 st Transmit PDO Mapping Parameter | Describes the arrangement of the objects, which are mapped in TPD01 | 42 |
| 1A01h: 2nd Transmit PDO Mapping Parameter | Describes the arrangement of the objects, which are mapped in TPD02 | 42 |
| 5000h: Diagnosis CAN Bus error | Informs on the CAN bus errors that occurred | 43 |
| 5F0Ah: Node-ID and baud rate of Bus CAN | Setting of Node ID and baud rate | 43 |
| 6000h: Operating Parameters | Setting of scaling and sense of rotation | 45 |
| 6002h: Overall number of measurement steps | Indicates the overall number of the system's measuring steps | 45 |
| 6003h: Preset value (calibration value) | Use object 6010h subindex 01h | 45 |
| 6004h: Position value | Use object 6020h subindex 01h | 46 |
| 6005h: Resolution | Setting of the resolution | 46 |
| 6010h: Calibration value | Setting the calibration value | 47 |
| 6020h: Position value | Position value | 47 |

| Name | Description | see page |
|---|--|----------|
| 6030h: Velocity | Velocity value | 48 |
| 6200h: Cycle timer | Identical with object 1800h, subindex 5 | 46 |
| 6400h: Operating range (Area state register) | Indicates whether the position value is within the set work areas 1 and 2. | 49 |
| 6401h: Work Area Low Limit | Setting of the lower limits of the work areas 1 and 2 | 50 |
| 6402h: Work Area High Limit | Setting of the upper limits of the work areas 1 and 2 | 50 |
| 6500h: Operating Status | Output of scaling and sense of rotation | 49 |
| 6501h: Single-turn resolution | The physical number of measurement steps per revolution | 52 |
| 6502h: Number of distinguishable revolutions | Number of revolutions the encoder is able to sense | 52 |
| 6503h: Alarms | Indication of error states | 52 |
| 6504h: Supported Alarms | Indicates the alarm messages that are supported | 53 |
| 6505h: Warnings | Indication of warnings | 53 |
| 6506h: Supported Warnings | Indicates the warnings that are supported | 53 |
| 6507h: Profile and Software Version | Indicates the version number of the device profile used and the version number of the encoder's firmware | 52 |
| 6508h: Operating Time | Hour meter (function is not supported) | 54 |
| 6509h: Offset value | Encoder reading at the time of calibration | 54 |
| 650Ah: Module Identification | Indicates the manufacturer-specific offset value as well as the smallest and largest transferable position value | 55 |
| 650Bh: Serial number | Indicates the serial number | 56 |
| 650Ch: Offset value for the multi-sensor device | Encoder state at the time of calibration | 56 |

Table 11: Overview of objects

4.7.2 Object description

4.7.2.1 1000h: Device Type

Object 1000h indicates the device profile number.

| | |
|-------------|---|
| Subindex | 00h |
| Description | Information on device profile and device type |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 000A0196h |

| | | | | |
|--------------|-----------------------|--------|--------------|--------|
| EEPROM | no | | | |
| Data content | Device profile number | | Encoder type | |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | 96h | 01h | 0Ah | 00h |

0196h (= 406d): CANopen Device Profile for Encoders

000Ah: Multi-sensor encoder interface

4.7.2.2 1001h: Error Register

Object 1001h indicates the error state of the device.

| | | | |
|--------------|-------------------------------|---|--|
| Subindex | 00h | | |
| Description | Currently pending error state | | |
| Access | ro | | |
| PDO mapping | no | | |
| Data type | UNSIGNED 8 | | |
| Default | 0h | | |
| EEPROM | no | | |
| Data content | Bit | Meaning | |
| | 0 | Set bit indicates the occurrence of any error condition | |
| | 4 | Set bit indicates communication error on the CAN bus (passive or bus-off) | |
| | 7 | Manufacturer-specific (sensor error) | |
| | 1-3, 5-6 | Not used | |

Faults and errors are signaled by an emergency message at the time of their occurrence.

4.7.2.3 1002h: Manufacturer Status Register

Object 1002h outputs the counter readings of the "Receive Error Counter" and "Transmit Error Counter" registers. The contents of these registers provide information on the transmit faults present at the mounting location of the encoder.

| | | | | |
|--------------|--|------------------------|--------|--------|
| Subindex | 00h | | | |
| Description | Transmit Error Counter and Receive Error Counter | | | |
| Access | ro | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 0h | | | |
| EEPROM | no | | | |
| Data content | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | Receive Error Counter | Transmit Error Counter | | |

4.7.2.4 1003h: Pre-defined Error Field

In object 1003h, the 8 latest error states are archived (see chapter [4.5.1: Emergency Service \(EMCY\)](#)).

- The entry under subindex 0 indicates the number of errors stored.
- The latest error state is always stored in subindex 01h. Previous error messages "slip onwards" in their position by one subindex.
- The whole error list is deleted by writing the value 0 in subindex 00h.
- The entries in the error list have the format described in chapter [4.5.1: Emergency Service \(EMCY\)](#).

| | |
|-------------|---------------------------------|
| Subindex | 00h |
| Description | number of error messages stored |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 0h |
| EEPROM | yes |

| | |
|-------------|------------------------------|
| Subindex | 01h-08h |
| Description | error messages that occurred |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 0h |
| EEPROM | yes |

4.7.2.5 1005h: COB-ID SYNC-message

The COB ID of the SYNC object is set via object 1005h.

| | | |
|--------------|---|---|
| Subindex | 00h | |
| Description | Defines the COB ID of the synchronization object (SYNC) | |
| Access | rw (writable in the "Pre-Operational" state only, see chapter 4.1) | |
| PDO mapping | no | |
| Data type | UNSIGNED 32 | |
| Default | 80h | |
| EEPROM | yes | |
| Data content | Bit 31 | not defined |
| | Bit 30 | 0: The device generates no SYNC message |
| | Bit 29 | 0: 11bit identifier (CAN 2.0A) 1: 29bit identifier (CAN 2.0B) |
| | Bit 28 ... 11 | 0: if bit 29 = 0 X: Bits 28 – 11 of the SYNC-COB-ID, if Bit 29 = 1 |

| | | |
|--|--------------|-----------------------------------|
| | Bit 10 ... 0 | X: bits 10 – 0 of the SYNC-COB-ID |
|--|--------------|-----------------------------------|

4.7.2.6 1008h: Manufacturer Device Name

Object 1008h indicates the device name. Since the latter comprises 5 data bytes, normal transmission is required for reading the SDO (see chapter [4.4.1.2: Normal Request/Response](#)).

| | | | | | | | |
|-------------|-------------------------------|-----------|-----------|-----------|-----------|--------|--------|
| Subindex | 00h | | | | | | |
| Description | Device name in ASCII notation | | | | | | |
| Access | Const | | | | | | |
| PDO mapping | no | | | | | | |
| Data type | Visible_String | | | | | | |
| Default | SGH10 | | | | | | |
| EEPROM | no | | | | | | |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 | Byte 4 | Byte 5 | Byte 6 |
| | 53h ("S") | 47h ("G") | 48h ("H") | 31h ("1") | 30h ("0") | 00h - | 00h - |

4.7.2.7 1009h: Manufacturer Hardware Version

Object 1009h indicates the hardware version.

| | | | | |
|--------------|------------------------------------|-----------|-----------|-----------|
| Subindex | 00h | | | |
| Description | Hardware version in ASCII notation | | | |
| Access | Const | | | |
| PDO mapping | no | | | |
| Data type | Visible_String | | | |
| Default | V100 | | | |
| EEPROM | no | | | |
| Data content | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | 56h ("V") | 30h ("1") | 30h ("0") | 31h ("0") |

4.7.2.8 100Ah: Manufacturer Software Version

Object 100Ah indicates the software version of the device.

| | | | | |
|--------------|------------------------------------|--------|--------|--------|
| Subindex | 00h | | | |
| Description | Software version in ASCII notation | | | |
| Access | Const | | | |
| PDO mapping | no | | | |
| Data type | Visible_String | | | |
| Default | V100 | | | |
| EEPROM | no | | | |
| Data content | Byte 0 | Byte 1 | Byte 2 | Byte 3 |

| | | | | |
|--|-----------|-----------|-----------|-----------|
| | 56h ("V") | 31h ("1") | 30h ("0") | 30h ("0") |
|--|-----------|-----------|-----------|-----------|

4.7.2.9 100Ch: Guard Time

Object 100Ch indicates the cycle time set in the master for node guarding (see chapter [4.5.2: Node Guarding](#)). The cycle time is indicated in milliseconds. Value "0h" means that Node Guarding is deactivated.

| | |
|-------------|-------------|
| Subindex | 00h |
| Description | Guard Time |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 16 |
| Default | 0h |
| EEPROM | yes |

4.7.2.10 100Dh: Life Time Factor

Object 100Dh indicates the life time factor set in the master for node guarding (see chapter [4.5.2: Node Guarding](#)). Value "0h" means that Node Guarding is deactivated.

| | |
|-------------|------------------|
| Subindex | 00h |
| Description | Life Time Factor |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 0h |
| EEPROM | yes |

4.7.2.11 1010h: Store Parameter

Parameters are transmitted into the EEPROM with this object in order to ensure that they are protected from loss of voltage. Different parameter groups are stored depending on the selection of the subindex to be accessed. The string "store" must be sent as data content.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 4h |
| EEPROM | no |

| | | | | |
|--------------|----------------------|---|-----------|-----------|
| Subindex | 01h | | | |
| Description | Store all parameters | | | |
| Access | rw | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 1h | | | |
| EEPROM | no | | | |
| Data content | Write: | | | |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | 73h ("s") | 61h ("a") | 76h ("v") | 65h ("e") |
| | Read: | | | |
| | Bit 31 ... 2 | 0, reserved | | |
| | Bit 1 | 0: Device does not independently store parameters | | |
| | Bit 0 | 1: Device stores parameters after command | | |

| | | | | |
|--------------|---|---|-----------|-----------|
| Subindex | 02h | | | |
| Description | Store only communication parameters (1000h-1FFFh, CiA DS-301) | | | |
| Access | rw | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 1h | | | |
| EEPROM | no | | | |
| Data content | Write: | | | |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | 73h ("s") | 61h ("a") | 76h ("v") | 65h ("e") |
| | Read: | | | |
| | Bit 31 ... 2 | 0, reserved | | |
| | Bit 1 | 0: Device does not independently store parameters | | |
| | Bit 0 | 1: Device stores parameters after command | | |

| | | | | |
|--------------|---|---|-----------|-----------|
| Subindex | 03h | | | |
| Description | Store only application parameters (1000h-1FFFh, CiA DS-406) | | | |
| Access | rw | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 1h | | | |
| EEPROM | no | | | |
| Data content | Write: | | | |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | 73h ("s") | 61h ("a") | 76h ("v") | 65h ("e") |
| | Read: | | | |
| | Bit 31 ... 2 | 0, reserved | | |
| | Bit 1 | 0: Device does not independently store parameters | | |
| | Bit 0 | 1: Device stores parameters after command | | |

| | | | | |
|--------------|---|---|-----------|-----------|
| Subindex | 04h | | | |
| Description | Store only manufacturer-specific parameters (2000h-5FFFh) | | | |
| Access | rw | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 1h | | | |
| EEPROM | no | | | |
| Data content | Write: | | | |
| | Byte 0 | Byte 1 | Byte 2 | Byte 3 |
| | 73h ("s") | 61h ("a") | 76h ("v") | 65h ("e") |
| | Read: | | | |
| | Bit 31 ... 2 | 0, reserved | | |
| | Bit 1 | 0: Device does not independently store parameters | | |
| | Bit 0 | 1: Device stores parameters after command | | |

4.7.2.12 1011h: Restore Parameter

Object 1011h restores the factory settings of the device depending on the selection. The string "load" must be sent as data content and reset executed thereafter. If the restored parameters are intended to be permanently available, they must be stored via object [1010h: Store Parameter](#).

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 4h |
| EEPROM | no |

| | | | | | | | | | | | | | |
|--------------|--|-----------|-----------|--------|--------|-----------|-----------|-----------|-----------|--------------|-------------|-------|--|
| Subindex | 01h | | | | | | | | | | | | |
| Description | Set all parameters to factory settings | | | | | | | | | | | | |
| Access | rw | | | | | | | | | | | | |
| PDO mapping | no | | | | | | | | | | | | |
| Data type | UNSIGNED 32 | | | | | | | | | | | | |
| Default | 1h | | | | | | | | | | | | |
| EEPROM | no | | | | | | | | | | | | |
| Data content | <p>Write:</p> <table border="1"> <tr> <td>Byte 0</td> <td>Byte 1</td> <td>Byte 2</td> <td>Byte 3</td> </tr> <tr> <td>6Ch ("l")</td> <td>6Fh ("o")</td> <td>61h ("a")</td> <td>64h ("d")</td> </tr> </table> <p>Read:</p> <table border="1"> <tr> <td>Bit 31 ... 1</td> <td>0, reserved</td> </tr> <tr> <td>Bit 0</td> <td>1: Device permits loading of default parameters.</td> </tr> </table> | Byte 0 | Byte 1 | Byte 2 | Byte 3 | 6Ch ("l") | 6Fh ("o") | 61h ("a") | 64h ("d") | Bit 31 ... 1 | 0, reserved | Bit 0 | 1: Device permits loading of default parameters. |
| Byte 0 | Byte 1 | Byte 2 | Byte 3 | | | | | | | | | | |
| 6Ch ("l") | 6Fh ("o") | 61h ("a") | 64h ("d") | | | | | | | | | | |
| Bit 31 ... 1 | 0, reserved | | | | | | | | | | | | |
| Bit 0 | 1: Device permits loading of default parameters. | | | | | | | | | | | | |

| | | | | | | | | | | | | | |
|--------------|--|-----------|-----------|--------|--------|-----------|-----------|-----------|-----------|--------------|-------------|-------|--|
| Subindex | 02h | | | | | | | | | | | | |
| Description | Set only communication parameters to factory settings (1000h-1FFFh, CiA DS-301) | | | | | | | | | | | | |
| Access | rw | | | | | | | | | | | | |
| PDO mapping | no | | | | | | | | | | | | |
| Data type | UNSIGNED 32 | | | | | | | | | | | | |
| Default | 1h | | | | | | | | | | | | |
| EEPROM | no | | | | | | | | | | | | |
| Data content | <p>Write:</p> <table border="1"> <tr> <td>Byte 0</td> <td>Byte 1</td> <td>Byte 2</td> <td>Byte 3</td> </tr> <tr> <td>6Ch ("l")</td> <td>6Fh ("o")</td> <td>61h ("a")</td> <td>64h ("d")</td> </tr> </table> <p>Read:</p> <table border="1"> <tr> <td>Bit 31 ... 1</td> <td>0, reserved</td> </tr> <tr> <td>Bit 0</td> <td>1: Device permits loading of default parameters.</td> </tr> </table> | Byte 0 | Byte 1 | Byte 2 | Byte 3 | 6Ch ("l") | 6Fh ("o") | 61h ("a") | 64h ("d") | Bit 31 ... 1 | 0, reserved | Bit 0 | 1: Device permits loading of default parameters. |
| Byte 0 | Byte 1 | Byte 2 | Byte 3 | | | | | | | | | | |
| 6Ch ("l") | 6Fh ("o") | 61h ("a") | 64h ("d") | | | | | | | | | | |
| Bit 31 ... 1 | 0, reserved | | | | | | | | | | | | |
| Bit 0 | 1: Device permits loading of default parameters. | | | | | | | | | | | | |

| | | | | |
|--------------|--|--|--|--|
| Subindex | 03h | | | |
| Description | Set only application parameters to factory settings (6000h-9FFFh, CiA DS-406) | | | |
| Access | rw | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 1h | | | |
| EEPROM | no | | | |
| Data content | Write: Byte 0 Byte 1 Byte 2 Byte 3 6Ch ("l") 6Fh ("o") 61h ("a") 64h ("d") Read: Bit 31 ... 1 0, reserved Bit 0 1: Device permits loading of default parameters. | | | |

| | | | | |
|--------------|--|--|--|--|
| Subindex | 04h | | | |
| Description | Set only manufacturer-specific parameters to factory settings (2000h-5FFFh) | | | |
| Access | rw | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 1h | | | |
| EEPROM | no | | | |
| Data content | Write: Byte 0 Byte 1 Byte 2 Byte 3 6Ch ("l") 6Fh ("o") 61h ("a") 64h ("d") Read: Bit 31 ... 1 0, reserved Bit 0 1: Device permits loading of default parameters. | | | |

4.7.2.13 1014h: COB-ID Emergency message

The COB ID of the Emergency object is set via object 1014h (see chapter [4.5.1: Emergency Service \(EMCY\)](#)).

| | | |
|--------------|---|--|
| Subindex | 00h | |
| Description | Defines the COB ID of the Emergency object (EMCY) | |
| Access | rw (writable in the "Pre-Operational" state only see chapter 4.1: Frame structure) | |
| PDO mapping | no | |
| Data type | UNSIGNED 32 | |
| Default | 80h + Node-ID | |
| EEPROM | yes | |
| Data content | Bit 31 | 0: EMCY object exists / is valid 1: EMCY object does not exist / is invalid |
| | Bit 30 | Always 0b |
| | Bit 29 | 0: 11bit identifier (CAN 2.0A) 1: 29bit identifier (CAN 2.0B) |
| | Bit 28 ... 11 | 0: if Bit 29 = 0b X: Bits 28 – 11 of the EMCY-COB-ID, if Bit 29 = 1b |
| | Bit 10 ... 0 | X: bits 10 – 0 of the EMCY-COB-ID |

4.7.2.14 1017h: Producer Heartbeat Time

The cycle time "Heartbeat Time" for the heartbeat protocol is set via object 1017h. The cycle time is indicated in milliseconds.

| | | |
|--------------|--|--|
| Subindex | 00h | |
| Description | defines the cycle time of the heartbeat monitoring service | |
| Access | rw | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 0 | |
| EEPROM | yes | |
| Data content | 0d, 10d ... 65535d (0h, Ah ... FFFFh); the numerical value corresponds to a multiple of 1 ms. Value 0h disables the service. | |

4.7.2.15 1018h: Identity Object

The manufacturer identification number (Vendor ID) is indicated by object 1018h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 4h |
| EEPROM | no |

| | |
|-------------|---|
| Subindex | 01h |
| Description | The manufacturer identification number (vendor ID) for the company SIKO GmbH allocated by the CiA |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 195h |
| EEPROM | no |

| | |
|-------------|--|
| Subindex | 02h |
| Description | Product Code (function is not supported, only compatibility entry for various configurators) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | FFFFFFFh |
| EEPROM | no |

| | |
|-------------|---|
| Subindex | 03h |
| Description | Revision number (function is not supported, only compatibility entry for various configurators) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | FFFFFFFh |
| EEPROM | no |

| | |
|-------------|---------------|
| Subindex | 04h |
| Description | Serial Number |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 1h |
| EEPROM | yes |

4.7.2.16 1200h: Server SDO Parameter

The COB IDs for the server SDOs are indicated via object 1200h. The COB IDs cannot be changed.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|-------------|------------------------------|
| Subindex | 01h |
| Description | COB-ID Client -> Server (rx) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 00000600h + Node-ID |
| EEPROM | no |

| | |
|-------------|------------------------------|
| Subindex | 02h |
| Description | COB-ID Server -> Client (tx) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 00000580h + Node-ID |
| EEPROM | no |

4.7.2.17 1800h: 1st Transmit PDO Parameter

TPD01 is used for asynchronous PDO transmission according to CiA DS-406.
The communication parameters for TPD01 are set via object 1800h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 5h |
| EEPROM | no |

| | |
|-------------|--|
| Subindex | 01h |
| Description | COB ID of the PD01 |
| Access | rw (writable in the "Pre-Operational" state only see chapter 4.1) |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 180h + Node-ID |
| EEPROM | yes |

| | | | | | | | |
|--------------|---|------------|--|------------|--|------------|---|
| Subindex | 02h | | | | | | |
| Description | Transmission Type | | | | | | |
| Access | rw | | | | | | |
| PDO mapping | no | | | | | | |
| Data type | UNSIGNED 8 | | | | | | |
| Default | FEh (254d) | | | | | | |
| EEPROM | yes | | | | | | |
| Data content | <table border="1"> <tr> <td>FEh (254d)</td> <td>PDO has asynchronous characteristics (PDO is sent depending on the "Event Timer").</td> </tr> <tr> <td>FFh (255d)</td> <td></td> </tr> <tr> <td>FDh (253d)</td> <td>Device responds only to RTR request if RTR Bit 30 is enabled in the COB-ID.</td> </tr> </table> | FEh (254d) | PDO has asynchronous characteristics (PDO is sent depending on the "Event Timer"). | FFh (255d) | | FDh (253d) | Device responds only to RTR request if RTR Bit 30 is enabled in the COB-ID. |
| FEh (254d) | PDO has asynchronous characteristics (PDO is sent depending on the "Event Timer"). | | | | | | |
| FFh (255d) | | | | | | | |
| FDh (253d) | Device responds only to RTR request if RTR Bit 30 is enabled in the COB-ID. | | | | | | |

| | |
|-------------|--|
| Subindex | 03h |
| Description | Inhibit time (function is not supported, only compatibility entry for various configurators) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 16 |
| Default | 0h |
| EEPROM | no |

| | |
|----------|---|
| Subindex | 04h (is not used, access attempt generates error message) |
|----------|---|

| | |
|--------------|--|
| Subindex | 05h |
| Description | Event timer for TPD01 hard-wired (CiA DS-406) with cyclic timer 6200h |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 16 |
| Default | 0h |
| EEPROM | yes |
| Data content | The service is disabled by writing the value 0h. The content of this object is identical with object 6200h. If the value is changed with the timer running, the change will be applied only with the next timer operation. |

| | |
|----------|---|
| Subindex | 06h (is not used, access attempt generates error message) |
|----------|---|

4.7.2.18 1801h: 2nd Transmit PDO Parameter

TPD02 is used for synchronous PDO transmission according to CiA DS-406. The communication parameters for TPD02 are set via object 1801h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 5h |
| EEPROM | no |

| | |
|-------------|--|
| Subindex | 01h |
| Description | COB ID of the PD02 |
| Access | rw (writable in the "Pre-Operational" state only see chapter 4.1) |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 280h + Node-ID |
| EEPROM | yes |

| | | |
|--------------|--------------------------|---|
| Subindex | 02h | |
| Description | Transmission Type | |
| Access | rw | |
| PDO mapping | no | |
| Data type | UNSIGNED 8 | |
| Default | 1h | |
| EEPROM | yes | |
| Data content | FEh (254d) FFh (255d) | PDO is sent after 1d ... 240d received SYNC messages. |
| | FDh (252d) | Device responds only to RTR request if RTR Bit 30 is enabled in the COB-ID. |

| | | |
|-------------|--|--|
| Subindex | 03h | |
| Description | Inhibit time (function is not supported, only compatibility entry for various configurators) | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 0h | |
| EEPROM | no | |

| | | |
|----------|---|--|
| Subindex | 04h (is not used, access attempt generates error message) | |
|----------|---|--|

| | | |
|-------------|---|--|
| Subindex | 05h | |
| Description | Event timer (function is not supported, only compatibility entry for various configurators) | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 0h | |
| EEPROM | no | |

| | | |
|----------|---|--|
| Subindex | 06h (is not used, access attempt generates error message) | |
|----------|---|--|

4.7.2.19 1A00h: 1st Transmit PDO Mapping Parameter

Object 1A00h determines the objects that are mapped in the first Transmit PDO (TPD01).

| | |
|-------------|--------------------------|
| Subindex | 00h |
| Description | number of objects mapped |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|-------------|--|
| Subindex | 01h |
| Description | 1 st object of the PD01 message (data bytes 0 to 3) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 60200120h (position value object 6020h, subindex 01h, 32bit) |
| EEPROM | no |

| | |
|-------------|---|
| Subindex | 02h |
| Description | 2 nd object of the PD01 message (data bytes 4 + 5) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 60300110h (velocity 6030h, subindex 01h, 16bit) |
| EEPROM | no |

4.7.2.20 1A01h: 2nd Transmit PDO Mapping Parameter

Object 1A01h determines the objects that are mapped in the second Transmit PDO (TPD02).

| | |
|-------------|--------------------------|
| Subindex | 00h |
| Description | number of objects mapped |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|-------------|--|
| Subindex | 01h |
| Description | 1 st object of the PDO2 message (data bytes 0 to 3) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 60200120h (position value object 6020h, subindex 01h, 32bit) |
| EEPROM | no |

| | |
|-------------|---|
| Subindex | 02h |
| Description | 2 nd object of the PDO2 message (data byte 4+ 5) |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 60300110h (velocity 6030h, subindex 01h, 16bit) |
| EEPROM | no |

4.7.2.21 5000h: Diagnosis CAN Bus error

A prioritized list of CAN bus errors occurring can be read via Object 5000h.

| | |
|--------------|--|
| Subindex | 00h |
| Description | Indicates the CAN Bus errors Acknowledge, Form, CRC and Stuff Error sorted by frequency. |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 0h |
| EEPROM | no |
| Data content | Byte 0 |
| | General Acknowledgment error |
| | 0, 1, 2, 3, 4 |
| | Byte 1 |
| | Form error |
| | 0, 1, 2, 3, 4 |
| | Byte 2 |
| | CRC error |
| | 0, 1, 2, 3, 4 |
| | Byte 3 |
| | Stuff error |
| | 0, 1, 2, 3, 4 |

Explanation of the data content

0: No error occurring at all

4: Error occurs most frequently

4.7.2.22 5FOAh: Node-ID and baud rate of Bus CAN

Node ID and baud rate of the bus can be set via Object 5FOAh.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | const |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|--------------|-------------|
| Subindex | 01h |
| Description | Node ID |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 1h |
| EEPROM | yes |
| Data content | 01h ... 7Fh |

| | |
|--------------|--|
| Subindex | 02h |
| Description | Baud rate of the CAN bus |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 5h (500kBaud) |
| EEPROM | yes |
| Data content | 1: 20 kbit/s 2: 50 kbit/s 3: 125 kbit/s 4: 250 kbit/s 5: 500 kbit/s 6: 800 kbit/s 7: 1000 kbit/s |

4.7.2.23 6000h: Operating Parameters

Settings of the operating parameters can be made through object 6000h.

| | | |
|--------------|----------------------|---|
| Subindex | 00h | |
| Description | Operating Parameters | |
| Access | rw | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 4h | |
| EEPROM | yes | |
| Data content | Bit 15 ... 4 | not used |
| | Bit 3 | 0: Counting direction ascending values 1: Counting direction descending values |
| | Bit 2 | 1: Scaling enabled |
| | Bit 1 | not used |
| | Bit 0 | not used |

Scaling: The encoder works with its set resolution which can be configured via object 6005h. The scaling function cannot be disabled.

Counting direction positive: ascending position values when the wire is pulled out.

Counting direction negative: descending position values when the wire is pulled out.

Note:

After switching the counting direction from negative to positive, a desired calibration value must be sent anew.

4.7.2.24 6002h: Overall number of measurement steps

Object 6002h indicates the overall number of the system's measuring steps.

| | | |
|-------------|-------------------------------------|--|
| Subindex | 00h | |
| Description | Overall number of measurement steps | |
| Access | rw | |
| PDO mapping | no | |
| Data type | UNSIGNED 32 | |
| Default | 10239d (000027FF) | |
| EEPROM | yes | |

4.7.2.25 6003h: Preset value (calibration value)

This object is not used. See object [6010h: Calibration value](#)

4.7.2.26 6004h: Position value

This object is not used. See object [6020h: Position value](#)

4.7.2.27 6005h: Resolution

Resolution is determined via object 6005h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|--------------|---|
| Subindex | 01h |
| Description | Resolution of the linear sensor. The parameter must be indicated as multiple of nm according to CiA DS-406. |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 100000d (000186A0h) |
| EEPROM | yes |
| Data content | 100000d (000186A0h) |

| | |
|--------------|--|
| Subindex | 02h |
| Description | Step width of the velocity of the linear sensor. The parameter must be indicated as multiple of 0.01 mm/s according to CiA DS-406. |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 100d (64h) |
| EEPROM | yes |
| Data content | 100d (64h) |

4.7.2.28 6010h: Calibration value

The position value of the encoder can be set to a calibration value with calibration via object 6010h. Position value = measured value + calibration value.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 1h |
| EEPROM | no |

| | |
|--------------|--|
| Subindex | 01h |
| Description | Calibration value |
| Access | rw |
| PDO mapping | yes |
| Data type | SIGNED 32 |
| Default | 0h |
| EEPROM | no |
| Data content | -10239d...10239d (FFFFD801h...000027FFh) |

4.7.2.29 6020h: Position value

Object 6020h indicates the current position value of the encoder.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 1h |
| EEPROM | no |

| | |
|-------------|----------------|
| Subindex | 01h |
| Description | Position value |
| Access | ro |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | 0h |
| EEPROM | no |

Position value = measured value + calibration value

4.7.2.30 6030h: Velocity

Velocity can be read via object 6030h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 1h |
| EEPROM | no |

| | |
|-------------|-------------------------|
| Subindex | 01h |
| Description | Velocity value in mm/ s |
| Access | ro |
| PDO mapping | no |
| Data type | SIGNED 16 |
| Default | 0h |
| EEPROM | no |

4.7.2.31 6200h: Cycle timer

Object 6200h sets a cycle time for the output of PDO1. This value is permanently linked to object [1800h: 1st Transmit PDO Parameter](#) subindex 05h. Timer-controlled output is active as soon as a valid cycle time has been entered and the device is operated in the operational mode. Value 0h disables the function.

| | |
|--------------|----------------------------|
| Subindex | 00h |
| Description | Cycle timer |
| Access | rw |
| PDO mapping | no |
| Data type | UNSIGNED 16 |
| Default | 0h |
| EEPROM | yes |
| Data content | 0d ... 65535d (0h...FFFFh) |

4.7.2.32 6400h: Operating range (Area state register)

Object 6400h outputs whether the position value is within the set work areas 1 and 2.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | | | | | | | | | |
|--------------|---|-------------|----------|-------|--|-------|---|-------|--|
| Subindex | 01h | | | | | | | | |
| Description | Status of operating range 1 | | | | | | | | |
| Access | ro | | | | | | | | |
| PDO mapping | no | | | | | | | | |
| Data type | UNSIGNED 8 | | | | | | | | |
| Default | 0h | | | | | | | | |
| EEPROM | no | | | | | | | | |
| Data content | <table border="1"> <tr> <td>Bit 7 ... 3</td> <td>not used</td> </tr> <tr> <td>Bit 2</td> <td>0: Position value is within the operating range 1: Position value is smaller than the limit set in Object 6401.1h</td> </tr> <tr> <td>Bit 1</td> <td>0: Position value is within the operating range 1: Position value is larger than the limit set in Object 6402.1h</td> </tr> <tr> <td>Bit 0</td> <td>0: Position value is within the operating range set 1: Position value is beyond the operating range set</td> </tr> </table> | Bit 7 ... 3 | not used | Bit 2 | 0: Position value is within the operating range 1: Position value is smaller than the limit set in Object 6401.1h | Bit 1 | 0: Position value is within the operating range 1: Position value is larger than the limit set in Object 6402.1h | Bit 0 | 0: Position value is within the operating range set 1: Position value is beyond the operating range set |
| Bit 7 ... 3 | not used | | | | | | | | |
| Bit 2 | 0: Position value is within the operating range 1: Position value is smaller than the limit set in Object 6401.1h | | | | | | | | |
| Bit 1 | 0: Position value is within the operating range 1: Position value is larger than the limit set in Object 6402.1h | | | | | | | | |
| Bit 0 | 0: Position value is within the operating range set 1: Position value is beyond the operating range set | | | | | | | | |

| | | | | | | | | | |
|--------------|---|-------------|----------|-------|--|-------|---|-------|--|
| Subindex | 02h | | | | | | | | |
| Description | Status of operating range 2 | | | | | | | | |
| Access | ro | | | | | | | | |
| PDO mapping | no | | | | | | | | |
| Data type | UNSIGNED 8 | | | | | | | | |
| Default | 0h | | | | | | | | |
| EEPROM | no | | | | | | | | |
| Data content | <table border="1"> <tr> <td>Bit 7 ... 3</td> <td>not used</td> </tr> <tr> <td>Bit 2</td> <td>0: Position value is within the operating range 1: Position value is smaller than the limit set in Object 6401.2h</td> </tr> <tr> <td>Bit 1</td> <td>0: Position value is within the operating range 1: Position value is larger than the limit set in Object 6402.2h</td> </tr> <tr> <td>Bit 0</td> <td>0: Position value is within the operating range set 1: Position value is beyond the operating range set</td> </tr> </table> | Bit 7 ... 3 | not used | Bit 2 | 0: Position value is within the operating range 1: Position value is smaller than the limit set in Object 6401.2h | Bit 1 | 0: Position value is within the operating range 1: Position value is larger than the limit set in Object 6402.2h | Bit 0 | 0: Position value is within the operating range set 1: Position value is beyond the operating range set |
| Bit 7 ... 3 | not used | | | | | | | | |
| Bit 2 | 0: Position value is within the operating range 1: Position value is smaller than the limit set in Object 6401.2h | | | | | | | | |
| Bit 1 | 0: Position value is within the operating range 1: Position value is larger than the limit set in Object 6402.2h | | | | | | | | |
| Bit 0 | 0: Position value is within the operating range set 1: Position value is beyond the operating range set | | | | | | | | |

4.7.2.33 6401h: Work Area Low Limit

Each a lower limit can be set for either work area via Object 6401h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|--------------|---|
| Subindex | 01h |
| Description | Lower limit of work area 1 |
| Access | rw |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | -20478d(FFFFB002h) |
| EEPROM | yes |
| Data content | -20478d(FFFFB002h)... 30717d(000077FDh) |

| | |
|--------------|---|
| Subindex | 02h |
| Description | Lower limit of work area 2 |
| Access | rw |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | -20478d(FFFFB002h) |
| EEPROM | Yes |
| Data content | -20478d(FFFFB002h)... 30717d(000077FDh) |

4.7.2.34 6402h: Work Area High Limit

Each an upper limit can be set for either work area via Object 6402h.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 2h |
| EEPROM | no |

| | |
|--------------|---|
| Subindex | 01h |
| Description | Upper limit of work area 1 |
| Access | rw |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | 30717d(000077FDh) |
| EEPROM | yes |
| Data content | -20478d(FFFFB002h)... 30717d(000077FDh) |

| | |
|--------------|---|
| Subindex | 02h |
| Description | Upper limit of work area 2 |
| Access | rw |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | 30717d(000077FDh) |
| EEPROM | yes |
| Data content | -20478d(FFFFB002h)... 30717d(000077FDh) |

4.7.2.35 6500h: Operating Status

The object 6500h indicates the settings programmed with object 6000h.

| | | |
|--------------|------------------|---|
| Subindex | 00h | |
| Description | Operating Status | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 4h | |
| EEPROM | no | |
| Data content | Bit 15 ... 4 | not used |
| | Bit 3 | 0: Counting direction ascending values 1: Counting direction descending values |
| | Bit 2 | 1: Scaling enabled |
| | Bit 1 | not used |
| | Bit 0 | not used |

4.7.2.36 6501h: Single-turn resolution

Object 6501h indicates the physical number of measurement steps per revolution.

| | |
|-------------|---------------------|
| Subindex | 00h |
| Description | Physical resolution |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 100000d (000186A0h) |
| EEPROM | no |

4.7.2.37 6502h: Number of distinguishable revolutions

Object 6502h indicates the number of resolutions the encoder is able to sense.

| | |
|-------------|---------------------|
| Subindex | 00h |
| Description | Physical resolution |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 16 |
| Default | 1 |
| EEPROM | no |

4.7.2.38 6503h: Alarms

Object 6503h indicates other device-specific alarm messages in addition to the errors reported via the Emergency message. In the case of an error, the associated bit is set to 1.

| | | |
|--------------|----------------|--|
| Subindex | 00h | |
| Description | Alarm messages | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 0h | |
| EEPROM | no | |
| Data content | Bit 15 ... 14 | Not used |
| | Bit 13 | 0: Position value within work area 2 1: Position limit 2 exceeded or undershot (Work area 2) |
| | Bit 12 | 0: Position value within work area 1 1: Position limit 1 exceeded or undershot (Work area 1) |
| | Bit 11 ... 1 | Not used |
| | Bit 0 | 0: Position value valid 1: position value invalid |

4.7.2.39 6504h: Supported Alarms

This Object 6504h indicates the alarm messages that are supported. The relevant bits are set.

| | | |
|--------------|--------------------------|------------------------|
| Subindex | 00h | |
| Description | Supported alarm messages | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 3001h | |
| EEPROM | no | |
| Data content | Bit 15 ... 14 | Not used |
| | Bit 13 | Position limit 2 error |
| | Bit 12 | Position limit 1 error |
| | Bit 11 ... 1 | Not used |
| | Bit 0 | Position error |

4.7.2.40 6505h: Warnings

Warnings can be output via object 6505h. However, unlike alarm messages, the position value can be valid in case of a warning.

| | | |
|--------------|--------------|----------|
| Subindex | 00h | |
| Description | Warnings | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 0h | |
| EEPROM | no | |
| Data content | Bit 0 ... 15 | Not used |

4.7.2.41 6506h: Supported Warnings

The Object 6506h indicates the warnings that are supported.

| | | |
|--------------|--------------------|----------|
| Subindex | 00h | |
| Description | Supported warnings | |
| Access | ro | |
| PDO mapping | no | |
| Data type | UNSIGNED 16 | |
| Default | 0000h | |
| EEPROM | no | |
| Data content | Bit 0 ... 15 | Not used |

4.7.2.42 6507h: Profile and Software Version

The object 6507h indicates the encoder profile used (CANopen Device profile for encoders) and the version number of the firmware status.

| | | | | |
|-------------|------------------------------|--------|------------------|--|
| Subindex | 00h | | | |
| Description | Profile and Software Version | | | |
| Access | ro | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | 01000302h | | | |
| EEPROM | no | | | |
| | Profile Version | | Software version | |
| | Byte 0 (LSB) | Byte 1 | | |
| | 00h | 04h | | |

4.7.2.43 6508h: Operating Time

The operating hours can be indicated via object 6508h. This function is not supported

| | | | | |
|-------------|-------------|--|--|--|
| Subindex | 00h | | | |
| Description | Hour meter | | | |
| Access | ro | | | |
| PDO mapping | no | | | |
| Data type | UNSIGNED 32 | | | |
| Default | FFFFFFFh | | | |
| EEPROM | no | | | |

4.7.2.44 6509h: Offset value

Object 6509h outputs the difference between the encoder value and the position value scaled and offset with the calibration value.

| | | | | |
|-------------|--|--|--|--|
| Subindex | 00h | | | |
| Description | Encoder state at the time of calibration | | | |
| Access | ro | | | |
| PDO mapping | no | | | |
| Data type | SIGNED 32 | | | |
| Default | 0h | | | |
| EEPROM | yes | | | |

4.7.2.45 650Ah: Module Identification

Object 650Ah indicates the manufacturer-specific offset value as well as the smallest and largest transferable position value.

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 3h |
| EEPROM | no |

| | |
|-------------|------------------------------------|
| Subindex | 01h |
| Description | Manufacturer-specific offset value |
| Access | ro |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | 0h |
| EEPROM | no |

| | |
|-------------|--------------------------------------|
| Subindex | 02h |
| Description | Smallest transferable position value |
| Access | ro |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | -20478d (FFFFB002h) |
| EEPROM | no |

| | |
|-------------|-------------------------------------|
| Subindex | 03h |
| Description | Largest transferable position value |
| Access | ro |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | 30717d (000077FDh) |
| EEPROM | no |

4.7.2.46 650Bh: Serial number

Object 650Bh provides the serial number of the encoder.

| | |
|-------------|---------------|
| Subindex | 00h |
| Description | Serial number |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 32 |
| Default | 0h |
| EEPROM | yes |

4.7.2.47 650Ch: Offset value for the multi-sensor device

Object 650Ch outputs the difference between the encoder value and the position value scaled and offset with the calibration value (equivalent to object [6509h: Offset value](#)).

| | |
|-------------|--|
| Subindex | 00h |
| Description | indicates the largest supported subindex |
| Access | ro |
| PDO mapping | no |
| Data type | UNSIGNED 8 |
| Default | 1h |
| EEPROM | no |

| | |
|-------------|--------------|
| Subindex | 01h |
| Description | Offset value |
| Access | ro |
| PDO mapping | no |
| Data type | SIGNED 32 |
| Default | 0h |
| EEPROM | yes |



SIKO GmbH

Weihermattenweg 2
79256 Buchenbach

Phone

+ 49 7661 394-0

Fax

+ 49 7661 394-388

E-Mail

info@siko-global.com

Internet

www.siko-global.com

Service

support@siko-global.com



SGH10 / SGH10L

Date: 19.05.2022

Art. No. 89013

Mod. status 098/22

Page 57 of 57